





Unpack the machine and check the components



* Already installed in the machine

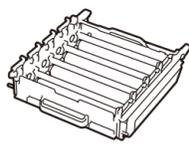


Drum Unit*

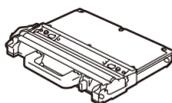

Waste Toner Box*



Belt Unit*

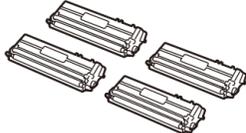

Inbox Toner Cartridges*
(Black, Cyan, Magenta and Yellow)



Telephone Line Cord
(For MFC models)



AC Power Cord



Telephone Line Cord Adapter
(Australia only)
(For MFC models)



Brother Installation Disc



Quick Setup Guide



Product Safety Guide



Reference Guide
(only for certain models)

NOTE:

- The components included in the box may differ depending on your country.
- The available connection interfaces vary depending on the model.
- Interface cables are not included. You must purchase the correct interface cable if you require one.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

Network cable


Use a straight-through Category 5e (or greater) twisted-pair cable.

- The illustrations in this Quick Setup Guide show the MFC-L8900CDW.




Watch our Video FAQs for help with setting up your Brother machine:
solutions.brother.com/videos.


1 Remove the packing materials and install the drum unit and toner cartridge assembly

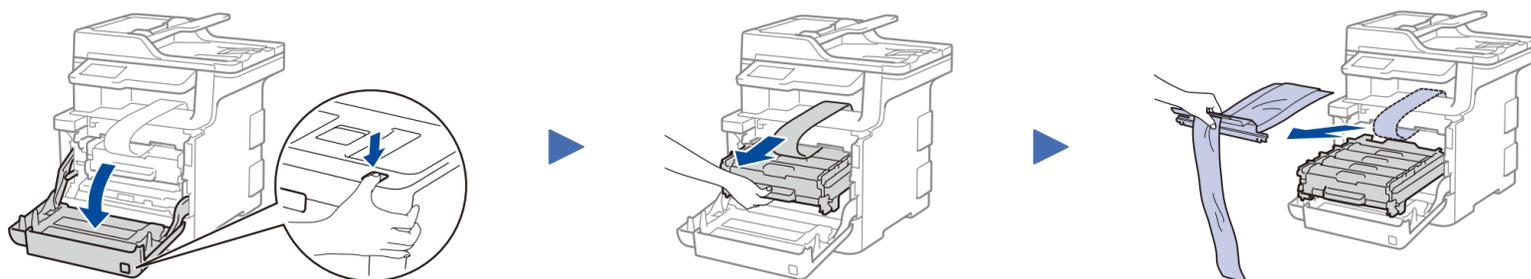


Remove the packing tape.

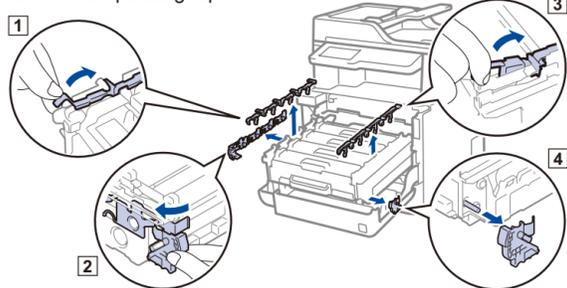

2 Load paper in the paper tray

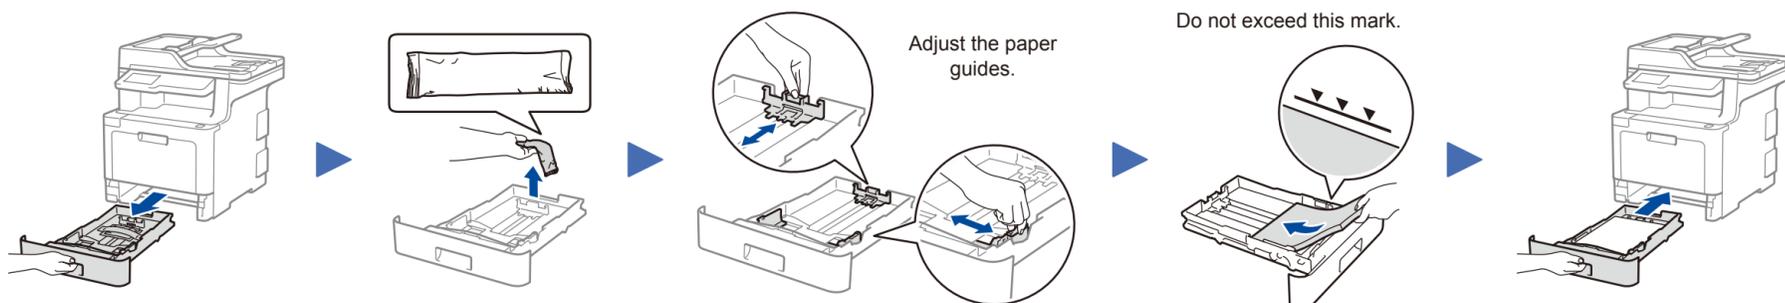

3 Connect the power cord and turn the machine on

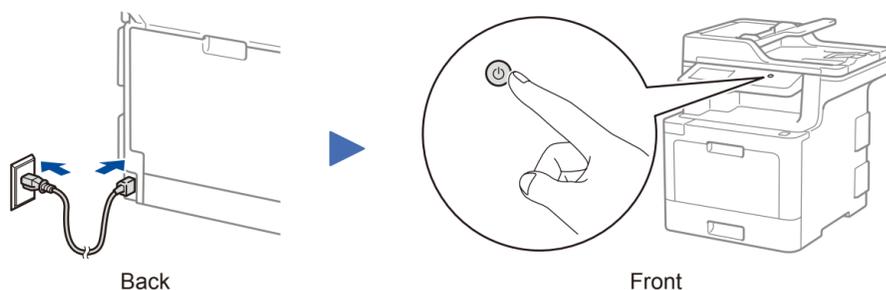

4 Select your country/language (Initial setup only)

After turning the machine on, you may be required to set your country or language (depending on your machine). If required, follow the on-screen instructions.

5 Select your language (if needed) (Only for certain models)

1. On the machine's Touchscreen, press [Settings] * > [All Settings] > [Initial Setup] > [Local Language].
2. Press your language.
3. Press .

* [Settings] menu is for DCP-L8410CDW and MFC-L8690CDW.




6 Select a device to connect to your machine

Computer




Go to **7** and follow the instructions.

Mobile Device

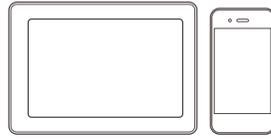

Go to **8** and follow the instructions.

7 Connect your computer

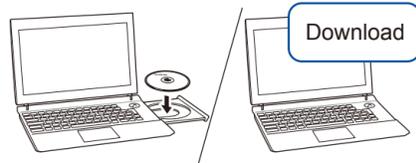

Put the installation disc into your CD/DVD drive, or download the Full Driver & Software Package at:

For Windows®: solutions.brother.com/windows
For Macintosh: solutions.brother.com/mac

If you are using a recently released operating system on your computer, visit the above websites for updated driver and software information.

Brother regularly updates firmware to add features and apply bug fixes. To check for the latest firmware, visit solutions.brother.com/up3.

▶ Follow the on-screen instructions and prompts.

For Windows®:
If the Brother screen does not appear automatically, go to **Computer (This PC)**. Double-click the CD/DVD-ROM icon, and then double-click **start.exe**.

For Macintosh:
For full driver functionality, we recommend choosing the **CUPS driver** when adding a printer.

▶ Finished

Can't Connect? Check the following:

Wireless network

▶ Restart your wireless access point/router (if possible).

Wired network

USB connection

▶ Disconnect the cable.

▶ Restart your machine and computer, and then go to **7**.

▶ If still not successful, go to **8**.


▶ If still not successful, visit support.brother.com for FAQs & Troubleshooting.

8 Alternative wireless setup


Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

SSID: XXXXXXXX
Network key: XXXX

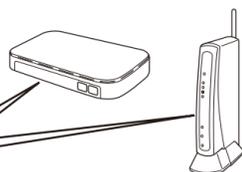

Press **WiFi** > [Setup Wizard] > [Yes].

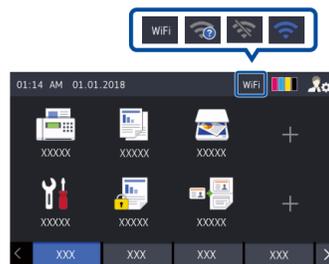

Even if you do not have a wireless access point/router, you can connect your device and your machine directly. For additional wireless network support, go to solutions.brother.com/wireless-support.

For Computer

Go to **7** to install software.

For Mobile Device

Go to **9** to install apps.

▶ Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

▶ When the wireless setup is successful, the Touchscreen displays [Connected].

▶ If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat **8**.

9 Print or scan using your mobile device

Your mobile device must be connected to the same wireless network as your Brother machine.

Brother SupportCenter is a mobile app that provides the latest support information for your Brother product. Visit the App Store or Google Play™ to download.



AirPrint is available for Apple device users. You do not need to download any software to use AirPrint. For more information, see the *Online User's Guide*.



Download and install our free application **Brother iPrint&Scan** from a mobile application store, such as the App Store, Google Play™ or Microsoft® Store using your mobile device.

Optional apps

You can print from and scan to your mobile device using various apps. For instructions, see the *Online User's Guide*.



Additional Wireless Support: solutions.brother.com/wireless-support

For FAQs, Troubleshooting, and to download software and manuals, visit support.brother.com.

© 2017 Brother Industries, Ltd. All rights reserved.